


Advanced RGB Gaming Keypad

FRM076

UPLIFT DESK

Work better. Live healthier.

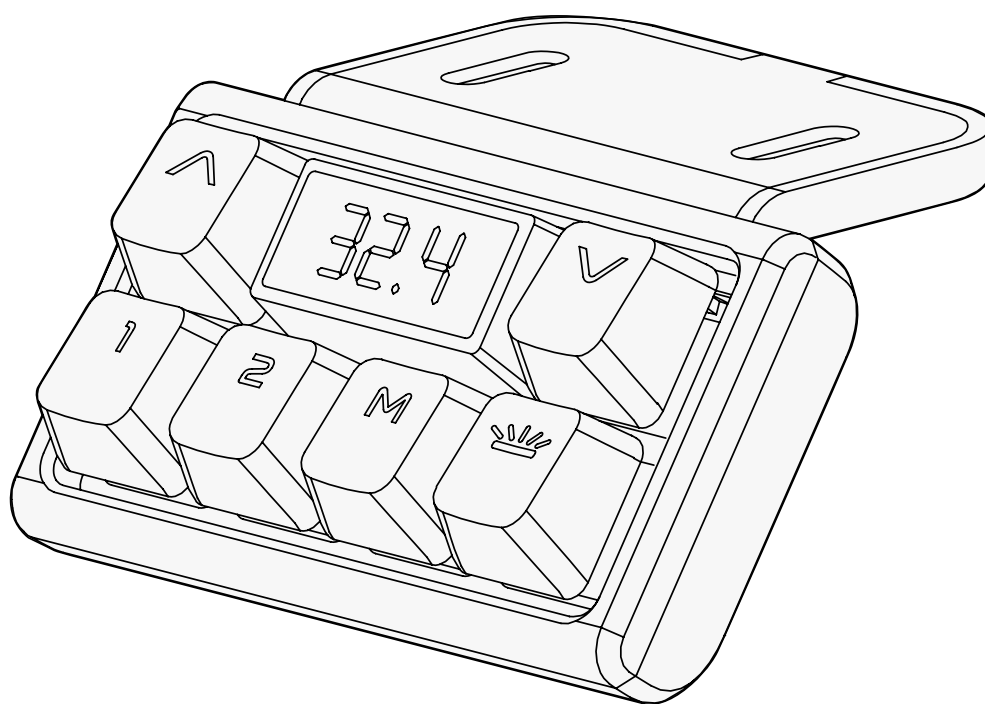

Scan QR code for
product webpage



Safety and Warnings



CAUTION: Read all instructions before assembly. Failure to assemble or operate properly may result in damage or personal injury. Retain manual for future reference. See the Safety and Warnings listed on the assembly instructions included with your desk frame.




CAUTION: In rare cases, certain light patterns may trigger seizures.


Under no circumstances does the manufacturer accept warranty or liability claims for damages caused from improper use of this product. Provide this manual to any new user.

Package Contents

Keypad

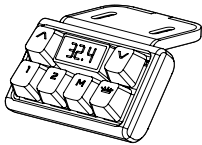


#10x5/8" Wood Screws
(provided with desk and labeled H14) qty 2

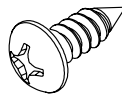

You'll also need

Phillips Screwdriver

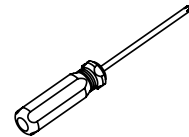

Assembly Instructions


Step 1 - Attach Keypad to Desktop

There are keypad attachment holes pre-drilled into UPLIFT desktops. The pre-drilled holes are located on both the left and right sides, so you can choose the side on which you'd like to attach the keypad.

Typically the desk is upside down when assembling and attaching the keypad. This means the keypad will be on the opposite side once the desk is flipped upright.


- Align the keypad mounting holes with the pre-drilled holes in the desktop.
- Attach the keypad to the desktop with two #10 x 5/8" Wood Screws provided with your desk frame and labeled **H14**. Be careful not to overtighten the screws to avoid stripping.

If your desktop doesn't have pre-drilled keypad holes, refer to the **Optional Desktop Drilling Instructions** in Step 2. If it does, skip to Step 3.

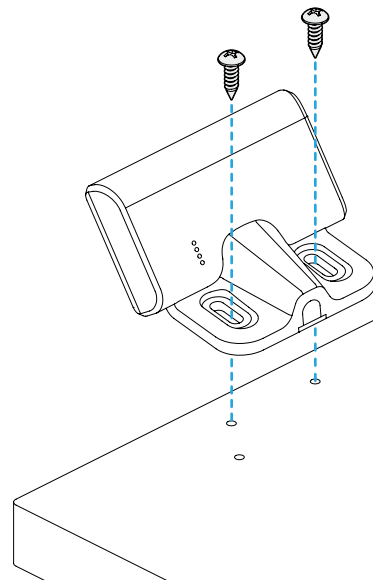



Step 2 - Optional Desktop Drilling Instructions

- If you are using your own desktop or you would like to attach the keypad in a different location than the pre-drilled holes, position the keypad on the desktop where you would like to attach it and make a pencil mark at the center of each keypad mounting hole.

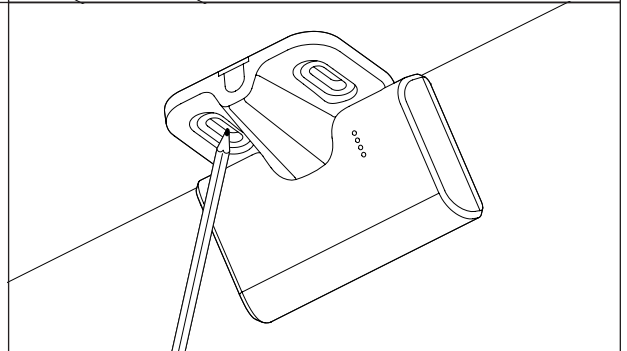


- B. Use an electric drill and a 1/8" drill bit to drill pilot holes at the pencil marks.

IMPORTANT: Ensure your desktop is at least 0.75" thick and DRILL NO DEEPER THAN 1/2" to avoid drilling through your desktop. To ensure this, wrap a piece of tape around your drill bit 1/2" from the tip. Stop drilling just before the tape touches the desktop.

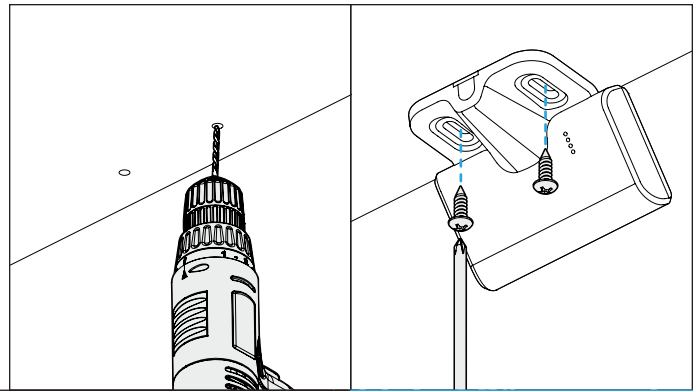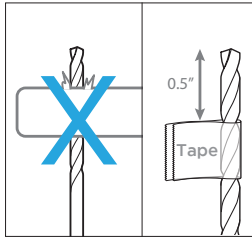

Step 3 - Connect the Keypad to the Control Box

- A. Plug the end of the keypad's cable into the port marked "HS" on your UPLIFT Desk control box.
- B. Organize your keypad cable to prevent it from snagging on anything when adjusting the desk's height.

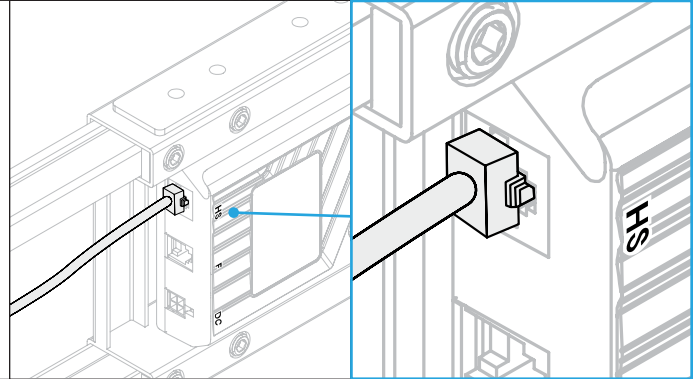



Step 4 - Perform Desk Reset Procedure

IMPORTANT: Once assembled and before using your desk, perform the following desk reset procedure to ensure the desk legs are calibrated properly.

- A. Hold the down arrow key until the desk reaches its lowest height and then release the key.
- B. Press and hold the down arrow key again for up to 15 seconds until the keypad display shows **ASf**, then release the key.
- C. Press and hold the down arrow key again until the desk lowers slightly then rises slightly. Release the key. If the desk didn't move, try the reset procedure again.
- D. Your desk is now ready for use!


Step 5 - LED Settings

  A. Select the LED Pattern

- Press the  key to access the LED settings menu.
- Press the  key again to cycle through the numbered LED pattern options (L01-L07, L00 is off).
- Press the "M" key to save the pattern selected.


Note: If the "M" key is not pressed within about five seconds, the keypad will exit the settings menu without saving selections and return to the desk height display.

 B. Select the LED Color (L01, L04, L05, L06, L07 LED single color patterns only)

- Press the  key to access the LED settings menu.
- Press the up arrow key to cycle through the color options.
 - (L01, L05, L06, L07) 42 color options
 - (L04) 3 white color temperature options
- Press the "M" key to save the pattern selected.


Note: If the "M" key is not pressed within about five seconds, the keypad will exit the settings menu without saving selections and return to the desk height display.

 C. Select the LED Animation Speed (L02 & L03 LED color changing patterns only)

- Press the  key to access the LED settings menu.
- Press the up arrow key to run through the animation speed options below.
 - (L02) 600, 300, 60, 30, 15, and 5 second cycles
 - (L03) 300, 60, 30, 15, 5 second cycles and cycle paused (- - -)
- Press the "M" key to save the pattern selected.

Note: If the "M" key is not pressed within about five seconds, the keypad will exit the settings menu without saving selections and return to the desk height display.

 D. Select the LED Brightness

- Press the  key to access the LED settings menu.
- Press the down arrow key to cycle through eight brightness levels (12.5% to 100%).
- Press the "M" key to save the pattern selected.

Note: If the "M" key is not pressed within about five seconds, the keypad will exit the settings menu without saving selections and return to the desk height display.

Step 5 - Advanced Keypad Settings & Programming

Scan the QR code or visit <https://www.upliftdesk.com/desk-assembly-and-programming/> to see Settings and Programming instructions.



Safety and Warnings

See the Safety and Warnings listed on the assembly instructions included with your desk frame.

UPLIFT DESK

Work better. Live healthier.

[upliftdesk.com](https://www.upliftdesk.com)

support@upliftdesk.com

800-349-3839

512-614-3152

SAVE THIS MANUAL

Study this manual carefully. If this product is sold, please provide this manual to the buyer, installers, or support personnel operating the product.



Copyright Notice: This manual is a component of this UPLIFT Desk product. This manual is a part of the scope of delivery, even if the item is resold. This manual is also available on the UPLIFT Desk website: [upliftdesk.com](https://www.upliftdesk.com). This manual is subject to United States copyright law.