 
Acoustic Panel Ceiling Hanging Kit

UPLIFT ACOUSTICS*

ACU001



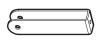

Bracket



Cable spool




Cinch (qty 2)



Hex Nut (qty 2)

 
(qty 2)

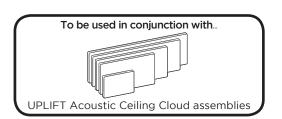

*A note before you begin:


Screw

This product is designed to be used to hang Acoustic Privacy Panels from ceilings. The provided cables can be looped around T-bars from dropped ceilings, architectural trusses, hooks (not provided), or other features. Make sure your ceiling can support the weight of the panels before you start installation.

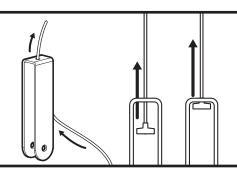

Step 1

 
Thread one end of the Cable spool through the inner hole on the Bracket, and pull until the Cable's stopper slides into place in the Bracket's hole, like so.

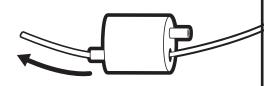

Step 2

Thread the Cable thru a large hole in the Cinch, until it comes out from the metal nozzle on the other end.


Pull 6" to 12" of Cable thru the Cinch in preparation for Step 3.

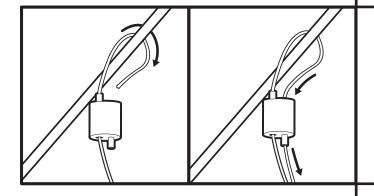

Step 3

Loop the cable coming out of the Cinch around the chosen mounting feature on your ceiling. Then feed it into the the large hole on the other side of the Cinch until it comes out the metal nozzle on the opposite side of the Cinch. Repeat steps 1-3 with the second Cable spool.


Give enough slack to allow each Bracket to dangle lower to the ground, so it's within easy reach for the next few steps.

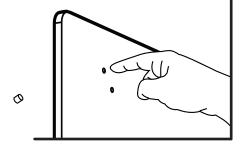

Step 4

Locate the pre-cut holes on the long end of the Acoustic Privacy Panel. If you can't find them, measure about 6.5" from the right and left sides, and 3.35" inches down from the top of the panel.


You will only need to pop out the holes nearest the top edge. Remove the material from these two pre-cut holes with your finger or a pencil.

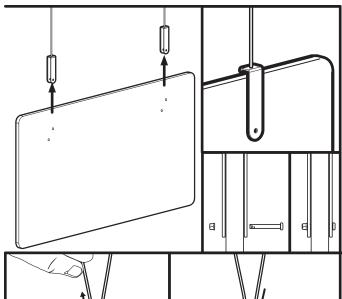

Step 5

Slide the Acoustic Privacy Panel into a Bracket, lining it up with up the holes. Using one (1) Screw and one (1) Hex nut, attach the Acoustic Privacy Panel to the Bracket. Repeat with the second Bracket.

At this point you should have your Acoustic Privacy Panel secured to your ceiling, but it is still free-hanging. We will adjust the placement and angle in the next step.

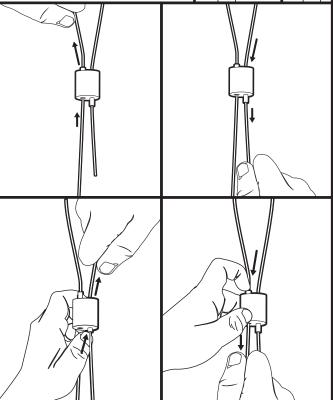

Step 6

Adjust the height of the panels:

To raise the panel, push the Cable coming up from the panel through the Cinch about 10-12" at a time. Then pull the loose end of the cable down from the other side of the Cinch towards the ground.

Slowly adjust the length of each cable, alternating sides, until the panel is level and at the preferred hanging height. Use a friend for guidance, if you need.

If you ever need to lower your panels, hold the Cinch firmly and press in on the little nozzles on the top and bottom. This will release the Cinch's hold on the Cable, allowing you to pull it in the opposite direction.

When all corners are equal and the panel is level, you can trim the excess wire or coil the slack and tie together to keep wires from dangling.

! CAUTIONS & WARNINGS

- ▲ CAUTION: Read all instructions before assembly. Failure to assemble properly may result in damage or personal injury.
- ▲ WARNING: These cable assemblies can carry 20 lbs each, but it's important to make sure your ceiling can support the weight of Acoustic Privacy Panels. which range in weight from 3.2 to 5.8 lbs each.
- ▲ WARNING: Do not hang additional objects on the panels, as this could cause damage to the panels and your ceiling.