

Advanced Keypad with USB


FRM715

UPLIFT DESK

Work better. Live healthier.

Package Contents

 Keypad



#10 x 5/8" Wood Screws (provided with desk and labeled H14)
qty 2



Scan QR code for
product webpage



 
Assembly Instructions

Step 1 - Attach Keypad to Desktop

There are Keypad attachment holes pre-drilled into UPLIFT desktops. The pre-drilled holes are located on both the left and right sides so you can choose which side of the desktop you'd like to attach the Keypad. Note: Typically the desk is upside down when assembling and attaching the Keypad, so if this is the case the Keypad will be on the opposite side once the desk is flipped upright.

If your desktop doesn't have pre-drilled Keypad holes, refer to the **Optional Desktop Drilling Instructions**.

- Align the Keypad mounting holes with the pre-drilled holes in the desktop.
- Being careful not to overtighten the screws to avoid stripping (especially if using a drill to insert the screws), attach the Keypad to the desktop with two #10 x 5/8" Wood Screws provided with your desk and labeled H14.
- Plug the end of the Keypad's cable into the port marked "HS" on your UPLIFT Desk control box.

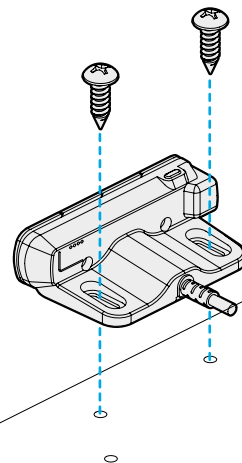


Step 2 - Perform Desk Reset Procedure

IMPORTANT: Once assembled and before using your desk, perform the following desk reset procedure to ensure the desk legs are calibrated properly.

- Hold the down arrow button until the desk reaches its lowest height and then release the button.
- Press and hold the down arrow button again for up to 15 seconds until the Keypad display shows , then release the button.
- Press and hold the down arrow button again until the desk lowers slightly then rises slightly. Release the button. If the desk didn't move, try the reset procedure again.
- Your desk is now ready for use!

Optional Desktop Drilling Instructions: If you are using your own desktop or you would like to attach the Keypad in a different location than the pre-drilled holes, position the Keypad on the desktop where you would like to attach it and make a pencil mark at the center of each Keypad mounting hole.

IMPORTANT: DRILL NO DEEPER THAN 1/2" to avoid drilling through your desktop. To ensure this, wrap a piece of tape around your drill bit 1/2" from the tip. Stop drilling just before the tape touches the desktop.

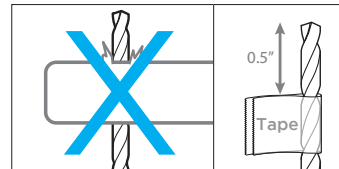

Step 3 - Keypad Settings & Programming

Scan the QR code or visit <https://www.upliftdesk.com/uplift-desk-assembly-programming/> to see Settings and Programming instructions.

Safety and Warnings



See the Safety and Warnings listed on the assembly instructions included with your desk frame.

USB Specifications

- USB-A port used alone: 18W max
- USB-C port used alone: 18W max
- USB-A & USB-C ports used simultaneously: 5W each max

AI-FRM715-1.0