
Inclining Walking Pad Remote Pairing

ACC113

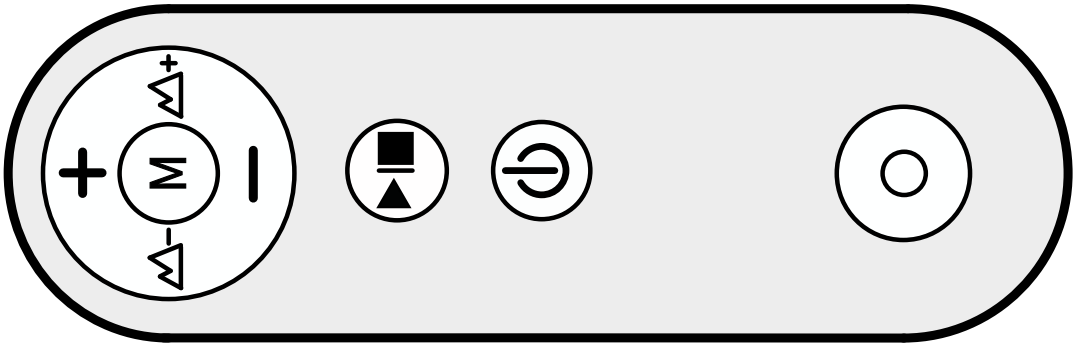

If the Inclining Walking Pad remote ever becomes disconnected or you have purchased a replacement remote, it can be paired quickly and easily by following the simple step-by-step instructions below.

These pairing instructions are also very helpful if multiple Walking Pads are being used in close proximity, as they allow specific remotes to be synced with specific Walking Pads without interference.

Remote Pairing Instructions

Step 1: Turn on the power switch located at the front of the Walking Pad.

Step 2: Within 5 seconds of turning on the power switch, point the remote at the Walking Pad and press and hold the "+" button.

Step 3: The Walking Pad will begin to beep rapidly indicating it has recognized the pairing signal. Continue holding the button until the beeping stops.

Step 4: The remote is successfully paired when the beeping stops.

upliftdesk.com
support@upliftdesk.com
800-349-3839
512-614-3152

Save This Manual: Review this manual thoroughly. If this product is sold, please ensure the buyer, installers, and support personnel receive a copy.

Copyright Notice: This manual is a component of this UPLIFT Desk product. This manual is a part of the scope of delivery, even if the item is resold. This manual is also available on the UPLIFT Desk website: upliftdesk.com. This manual is subject to United States copyright law.

For assembly assistance, chat us at upliftdesk.com/contact, call 800-349-3839, or email support@upliftdesk.com

©2026 UPLIFT Desk®. All Rights Reserved.

Scan for product webpage