
FlexMount Cable Manager

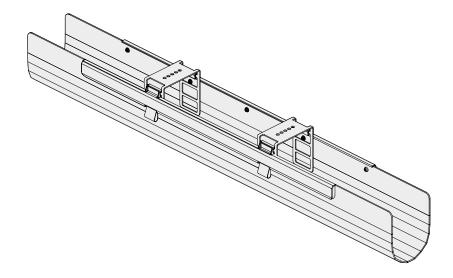





Scan for product webpage




For assembly assistance, visit upliftdesk.com/contact, call 800-349-3839, or email support@upliftdesk.com ©2025 UPLIFT Desk®. All Rights Reserved. Patent pending.

Safety and Warnings

CAUTION: Read all instructions before assembly. Failure to assemble or operate properly may result in damage or personal injury. Retain manual for future reference.

WARNING: Do not exceed the maximum 10 lb loading limit of the Cable Manager.

Under no circumstances does the manufacturer accept warranty or liability claims for damages caused from improper use of this product. Please provide these instructions to any new user or owner of the product.




Assembly Instructions


Attention: If installing on a desktop not provided by UPLIFT Desk, follow the step below to make pilot holes to attach the Cable Manager Brackets before proceeding to Step 1.

Use a pencil or pen to make two marks 11-3/4" apart and about 4" in from the back edge of the desktop per the diagram to the right.

Use a drill and a 1/8" drill bit to drill pilot holes at the marks. **IMPORTANT:** Ensure your desktop is at least 0.75"

thick and DRILL NO DEEPER THAN 1/2" to avoid drilling through your desktop. To help with this, wrap a piece of tape around your drill bit 1/2" from the tip. Stop drilling just before the tape touches the desktop.



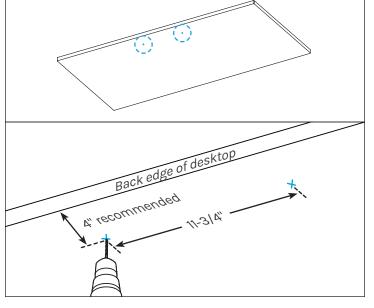

Step 1 - Install Cable Manager Brackets




Scan for assembly animation

Note: If you are installing the Cable Manager while assembling your desk, install these brackets before you flip the desk upright.

The Cable Manager Brackets feature five mounting hole positions, allowing it to be adjusted forward or backward under the desk. This helps prevent interference with other accessories, such as monitor arm clamps. We recommend that you use the middle hole initially, then adjust later if necessary.

Locate the two pre-drilled holes near the back of the desk. These holes are included on all desktops from UPLIFT Desk. See the section before Step 1 if you are not using a desktop from UPLIFT Desk.

Use a Phillips screwdriver to insert one #10 x 5/8" Wood Screw through the middle hole of each Bracket. Do not overtighten the screws.

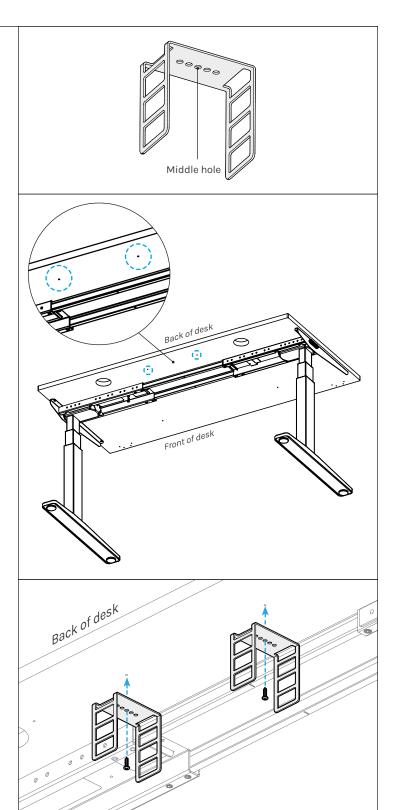

Step 2 - Install Cable Manager


Note: This step forward should be done with the desk sitting right side up.

The FlexMount Cable Manager Brackets include multiple height positions that allow it to be raised or lowered to make it deeper or shallower.

Grasp the nylon loops to hook Cable Manager to the back side of the Brackets at the desired height. Pull down on the nylon loops until the hooks lock into place.

Make sure Cable Manager is hung on the outside of Bracket as shown and not on the inside.

Place cables, powerstrips, power bricks, etc. inside and close it by hooking Cable Manager to the front of the Brackets at the desired height.

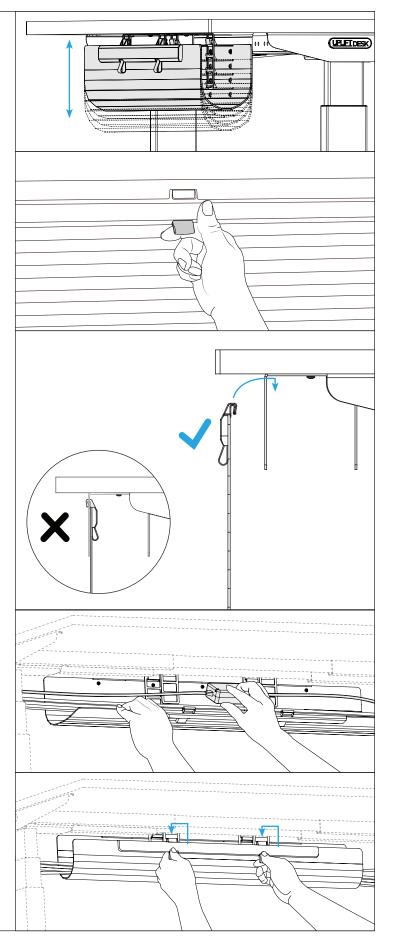


Pro Tip

You can optionally use the Hook & Loop Strips and Cable Mounts provided with your UPLIFT Desk frame to manage cables within the Cable Manager. Two options are explained below.


Option 1

Use the Hook & Loop Strips to tightly bundle cables before placing into the Cable Manager.

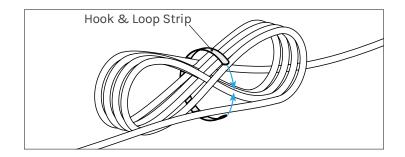


Option 2

Peel the backing from the Cable Mount and press it against the bottom of the desktop. Some recommended Cable Mount locations are shown below within blue circles.

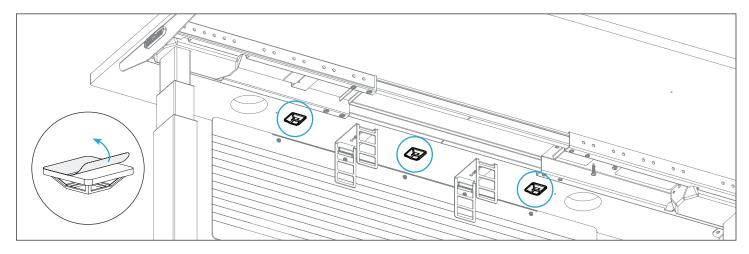

Insert Hook & Loop Strips into the Cable Mounts to organize cables.

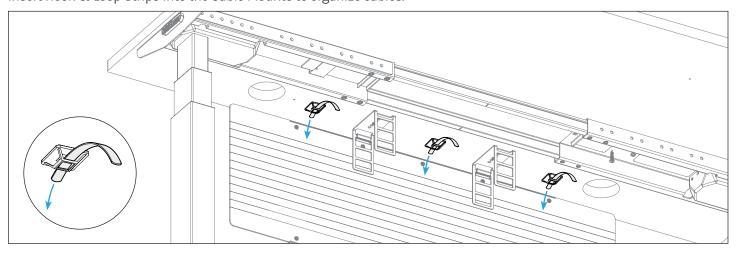



upliftdesk.com support@upliftdesk.com 800-349-3839 512-614-3152

Save This Manual: Study this manual carefully. If this product is sold, please provide this manual to the buyer, installers, or support personnel operating the product.