
# Advanced Wire Management Kit

WMK002

UPLIFT DESK
Work better. Live healthier.

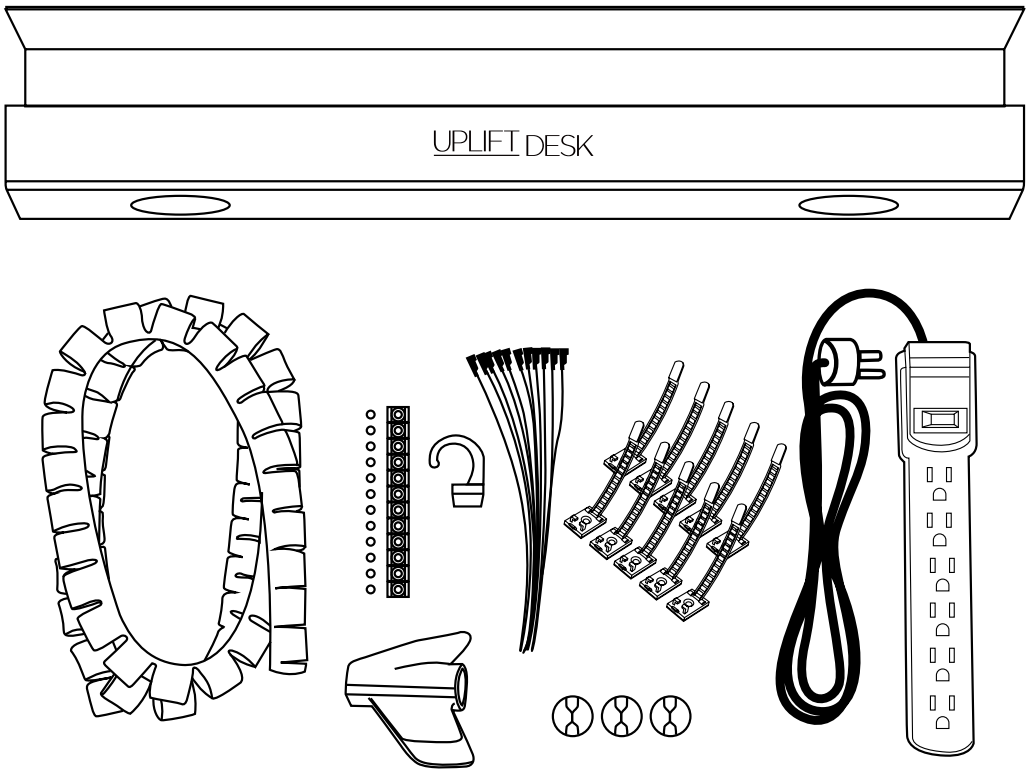


Scan QR code for product webpages

Advanced Wire Management Kit





For assembly assistance, visit upliftdesk.com/contact, or call 800-349-3839, or email support@upliftdesk.com | ©2024 UPLIFT Desk®. All Rights Reserved

## Safety and Warnings

**CAUTION:** Read all instructions before assembly. Failure to assemble or operate properly may result in damage or personal injury. Retain manual for future reference.

Under no circumstances does the manufacturer accept warranty or liability claims for damages caused from improper use of this product. Please provide these instructions to any new user or owner of the product.

## Package Contents
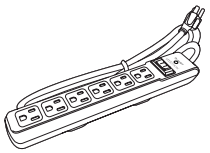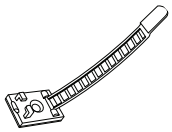
| | | | |
|---|---|---|---|
| Wire Tray  | Surge Protector  | Cable Organizer  | Screw-In Cable Mounts qty 12  |
| Cable Management Clips qty 3  | Accessory Hook  | Adhesive Cable Mounts qty 10  | Reusable Cable Ties qty 12  |


## Hardware Components

#4 x 3/8" Screws
qty 22




## You'll also need

Phillips Screwdriver



## Wire Tray


Install the UPLIFT Under Desk Wire Tray (See separate instructions for installation). It is designed to be mounted under the desk and toward the back.

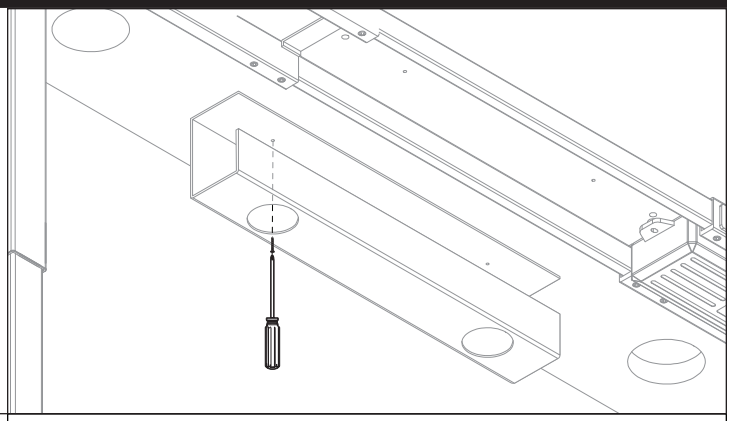

## Surge Protector

The Surge Protector has 6 outlets and a 15' cord. Plug your devices into the Surge Protector before plugging it into a power outlet. An LED light marked "Protected" is located near the power switch and indicates that the surge protector is protecting your equipment against electric surges. If the LED light goes out, your equipment is no longer protected and the Surge Protector should be replaced.


The Wire Tray can hold the Surge Protector and several cables or wires. If your other desk accessories have short cords, plugging them into the Surge Protector will allow you to move your desk up and down without being concerned about shorter wire lengths.

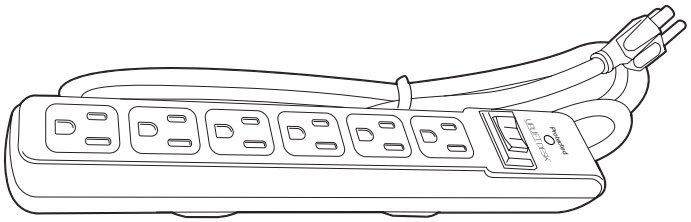


Warning: Do not plug into wall outlet while routing wires; you will plug into the wall as the last step. If you need to reroute wires, always unplug outlet strip from the wall first to eliminate electrocution risk during routing.

## Adhesive Cable Mounts


Adhesive Cable Mounts are easy to install and can be used anywhere. Remove the backing from the adhesive pad and place the mount where you would like to attach your cables. The adhesive sticks best to the metal frame of the desk, but the mounts can also be attached to the desktop using the included screws. Wrap the strap around your cables and feed the end through the prongs as shown. Pull to tighten, but leave some slack for mouse and keyboard cables to move. Cable Mounts can be opened and closed as needed to add or remove cables.

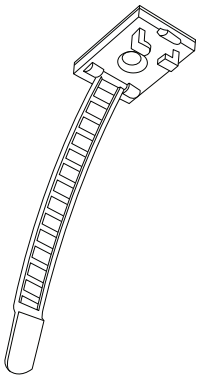

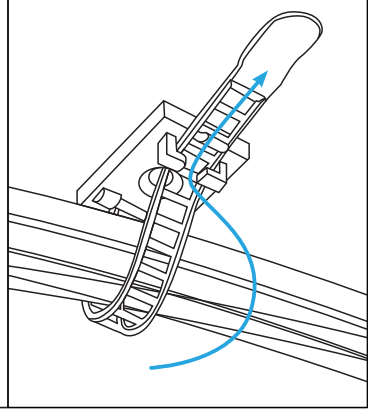


## Screw-In Cable Mounts & Reusable Cable Ties

Use the Screw-In Cable Mounts and Reusable Cable Ties jointly for an alternate solution to the Adhesive Cable Mounts. Use a drill and 1/8" drill bit to make pilot holes where you want to attach each mount. Drill pilot holes NO MORE than 1/2" deep. Insert an included wood screw using a Phillips screwdriver. Open and close cable mounts as needed to add or remove cables. Leave enough slack for mouse and keyboard cables to move.

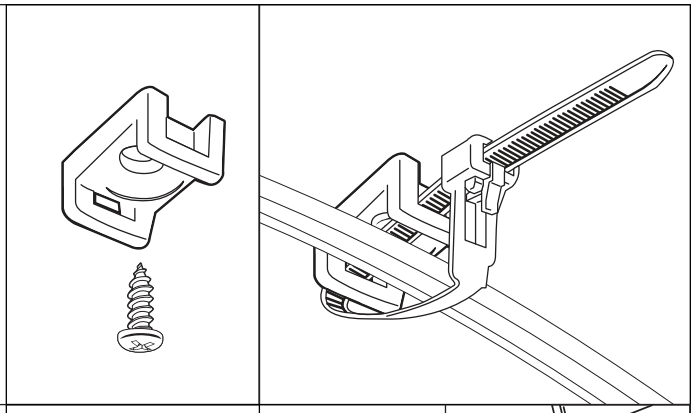


## Cable Management Clips

Keep ends of charging cables handy and ready for use with the Cable Management Clips. Remove the backing from the back of each clip and stick them wherever it is convenient to access your cables.

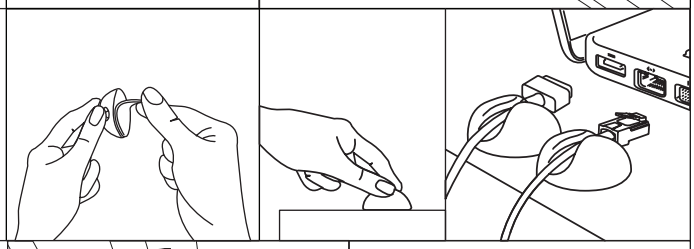


## Cable Organizer

Use the Cable Organizer to protect and route multiple cables from your desk to a power outlet. Pinch the included wire funnel to open it and let it close around your cables (Fig. 1). Slide the wire funnel through the Cable Organizer in the orientation shown (Fig. 2). The Cable Organizer will close behind the wire funnel as it passes through (Fig. 3). When all of your cables are inside the Cable Organizer, open the wire funnel to release the cables.

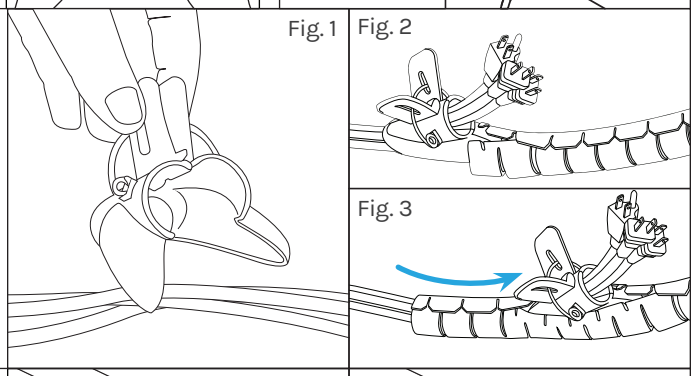


## Accessory Hook

Hang small items like headphones, bags, or keys from the Accessory Hook. Position the hook under your desk in a place that will be convenient and within reach and make a mark through each hole. Use a drill and 1/8" drill bit to make a pilot hole at the marked locations. Drill pilot holes NO MORE than 1/2" deep. Insert an included wood screw in each hole using a Phillips screwdriver.

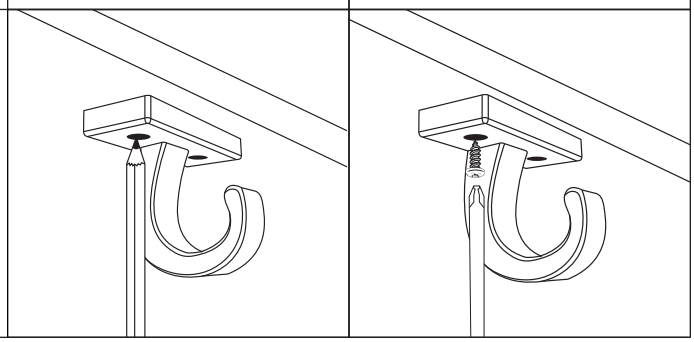

UPLIFT DESK

Work better. Live healthier.

upliftdesk.com
support@upliftdesk.com
800-349-3839
512-614-3152

### SAVE THIS MANUAL

Study this manual carefully. If this product is sold, please provide this manual to the buyer, installers, or support personnel operating the product.

© Copyright Notice: This manual is a component of this UPLIFT Desk product. This manual is a part of the scope of delivery, even if the item is resold. This manual is also available on the UPLIFT Desk website: upliftdesk.com. This manual is subject to United States copyright law.